

DESCRIPTION AND USES

Zinsser® Paper Scraper easily removes old wallpaper or residual adhesive after applying DIF Wallpaper Stripper. Paper Scraper is safer to use than razor-edged scrapers or putty knives because the blades are covered and held at the perfect angle for the best scraping effectiveness with no wall damage.

The non-razor edged replaceable blade is reversible with two cutting edges for quick removal of wet wallpaper and the "high points" of the wall without damaging the surface. The blades (purchased separately) can be quickly removed without tools for cleaning or replacement.

FEATURES

- Fast
- Safe
- Easy

PRODUCTS

SKU	Description
2986	Paper Scraper

INSTRUCTIONS FOR USE

Score wallpaper with PaperTiger. The stripper will be more effective with more holes in the wallpaper. Apply the DIF Wallpaper Stripper to dissolve old paste and loosen wallpaper. Hold Paper Scraper against the wall. Scrape off loosened wallpaper, paste high points or bumps. Blade may be reversed for new scraping edge. To remove residual adhesive, re-apply DIF Wallpaper Stripper. Rinse with clean water.

Instructions for Blade Reversal or Replacement

Pop off blade by pressing tabs forward and down.

Use caution when handling. Blades may be sharp.

Remove or replace blades as needed. Make sure the arrow on the blade is facing forward. Align holes on the blade with the posts on holder. Snap back into place. Be sure blade is snug against the front bottom of tool.

The technical data and suggestions for use contained herein are correct to the best of our knowledge, and offered in good faith. The statements of this literature do not constitute a warranty, express, or implied, as to the performance of these products. As conditions and use of our materials are beyond our control, we can guarantee these products only to conform to our standards of quality, and our liability, if any, will be limited to replacement of defective materials. All technical information is subject to change without notice.