



OUTDOOR FURNITURE OIL

PENETRATES & PROTECTS
PROFESSIONAL FORMULA FOR DENSE WOOD
RESTORES NATURAL, WARM APPEARANCE

TEAK

CAUTION
KEEP OUT OF REACH OF CHILDREN
FLAMMABLE
READ SAFETY DIRECTIONS
CONTAINS LIQUID HYDROCARBONS

OIL-BASED

INTERIOR/EXTERIOR

946 mL

CAUTION

KEEP OUT OF REACH OF CHILDREN

FLAMMABLE

DO NOT SWALLOW

CONTAINS: 3-Iodo-2-Propynyl Butyl Carbamate: 0.03 g/L

SAFETY DIRECTIONS: If medical advice is needed, have product container or label at hand. Keep away from heat, sparks and open flames. - No smoking. Do not breathe vapours. Wear protective gloves, protective clothing and eye protection. Keep only in original container. Avoid release to the environment.

WARNING STATEMENTS: Flammable liquid and vapour. Causes skin irritation. Causes serious eye irritation. May cause an allergic skin reaction. May cause genetic defects. May cause cancer. May cause drowsiness or dizziness. May cause damage to organs through prolonged or repeated exposure. May be fatal if swallowed and enters airways. Harmful to aquatic life with long lasting effects. Repeated exposure may cause skin dryness and cracking.

FIRST AID INSTRUCTIONS

IF SWALLOWED: Immediately call a POISON CENTRE (Phone: AUS 13 11 26; NZ 0800 764 766) or doctor. Rinse mouth. Do NOT induce vomiting. **IF ON SKIN (or hair):** Remove immediately all contaminated clothing. Rinse skin (or hair) with water. **IF IN EYES:** Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. **IF INHALED:** Remove affected person to fresh air and keep at rest in a position comfortable for breathing. **IN CASE OF FIRE:** Use alcohol resistant foam or fine spray/water fog for extinction. Wash contaminated clothing before reuse. Absorb spillage to prevent material damage.

STORAGE: Store in a well-ventilated place. Keep cool. Do not freeze. Store locked up.

DISPOSAL: Rags, steel wool or waste soaked with Zinsser Outdoor Furniture Oil may spontaneously catch fire if improperly discarded. Immediately after each use, place rags, steel wool or waste in a sealed water-filled metal container. For disposal of rags and unused amounts of product contact your local or state government environmental control agency.

For further information refer to the Safety Data Sheet available at www.rustoleum.com.au or www.rustoleum.co.nz

Zinsser® Outdoor Furniture Oil is specially formulated for dense woods such as teak, mahogany, and rosewood. Unlike surface coatings, Zinsser Outdoor Furniture Oil enhances the natural look and feel of wood. It penetrates deep into wood pores to create the rich, warm glow of a hand-rubbed finish. Zinsser Outdoor Furniture Oil protects wood from within. Resistant to chipping, peeling, general wear and weathering. It takes less than an hour to treat your wood with Zinsser Outdoor Furniture Oil – simply brush or wipe on and wipe off. Easy to apply and beautiful to look at, Zinsser Outdoor Furniture Oil is the choice of fine woodworkers and novices alike.

READ ALL DIRECTIONS BEFORE BEGINNING PROJECT.

RECOMMENDED FOR: Great for outdoor or indoor furniture and on marine surfaces such as wood boat decks, cabinets and rails.

NOT RECOMMENDED FOR: Patio decks, below waterline wood surfaces, interior floors.

APPLICATION: Do not apply in wet weather or at temperatures below 10°C or above 35°C. Zinsser Outdoor Furniture Oil may appear milky in the can, but will dry to a clear film. Ensure wood is dry and free from subsurface moisture and that any surface coating such as paint or varnish is completely removed. Sand if smooth finish is desired. SHAKE CONTAINER THOROUGHLY and test for colour on hidden section of wood. Flood on heavy application of Zinsser Outdoor Furniture Oil with brush, cloth, roller or spray, applying additional finish to areas that absorb all the liquid. Allow to penetrate for 30 minutes. DO NOT THIN.

RECOAT & TOP COAT: Reapply, allowing an additional 15 minutes penetration. Wipe or dry roll surface completely. Ready for use in 8-10 hours. Cooler temperatures will extend dry times. If a top coat such as a Polyurethane is desired, allow Zinsser Outdoor Furniture Oil to dry 72 hours before applying. If a clear wood finish such as a varnish is desired, use Zinsser® Exterior Varnish.

MAINTENANCE: Periodically reapply Zinsser Outdoor Furniture Oil to wood that appears dry, to restore the beauty and effectiveness of the finish.

CLEAN UP: Application tools or brushes should be cleaned with mineral turps or paint thinner.

COVERAGE: 14 to 19 m² per 946 mL

331269 OUTDOOR FURNITURE OIL



0 20066 38148 6

RUST-OLEUM CORPORATION

RUST-OLEUM AUSTRALIA PTY. LTD.
Unit 12, 4 Southridge Street
Eastern Creek, NSW 2766 Australia
PH: 1 300 784 476
www.rustoleum.com.au
sales@rustoleum.com.au

HAYDN BRUSH CO. LTD.
PO Box 86054
Christchurch 7675 NZ
PH: 64 3 347 7770
www.rustoleum.co.nz
info@haydn.co.nz

©2017 Rust-Oleum Corporation Made in USA L331269R 1217